PREMIER®

MANUAL DE INSTRUCCIONES
BATIDORA C/TAZA
ED-4482

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

ÍNDICE

INSTRUCCIONES DE SEGURIDAD 2
ESPECIFICACIONES 2
ANTES DE USAR POR PRIMERA VEZ 2
DESCRIPCIÓN 3
INSTRUCCIONES 3
INSTRUCCIONES DE MEZCLA 4
LIMPIEZA 4
CONTENIDO 4

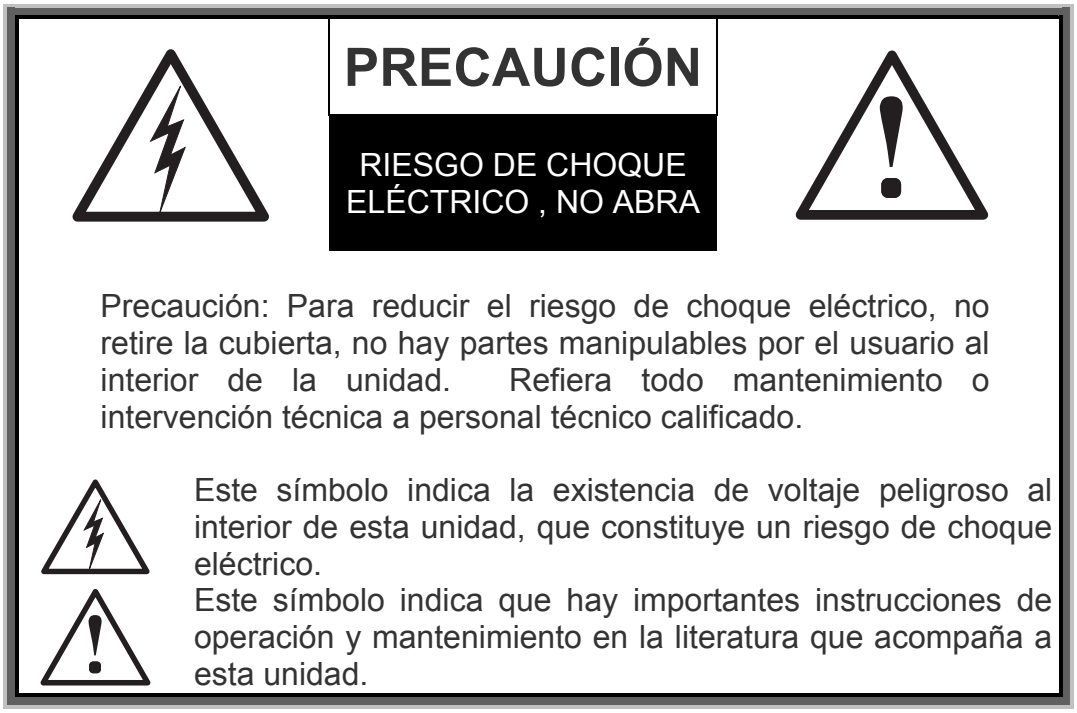
PRECAUCIÓN
RIESGO DE CHOQUE ELÉCTRICO , NO ABRA
Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.
Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.
Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA
Nos reservamos el derecho de modificar las especificaciones, características y/u operación de este producto sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

⚠INSTRUCCIONES DE SEGURIDAD

- Lea todas las instrucciones antes de utilizar la unidad.
- Con el fin de evitar el riesgo de choque eléctrico no coloque fuentes de agua cerca de la unidad ni la introduzca en agua u otros líquidos.
- Coloque el cable de poder de tal forma que las personas no se enreden con él.
- Asegúrese de que el voltaje de la unidad corresponde con el lugar donde la va a conectar.
- Antes de encender la unidad coloque el interruptor en la posición 0.
- La unidad está diseñada para uso en exteriores. Utilícela únicamente en exteriores.
- No coloque la unidad cerca del cortinas, o manteles, hornos microondas o fuente de calor y fuego.
- Coloque la unidad sobre una superficie plana y estable.
- Ubíquela cerca de la fuente de poder.
- No intente reparar la unidad usted mismo. Remita toda revisión, mantenimiento y reparación a personal de servicio técnico calificado.
- Mantenga la unidad fuera del alcance de los niños.
- Utilice la unidad para las funciones para las cuales fue diseñada.
- No toque las partes en movimiento cuando la esté usando.

ESPECIFICACIONES

Voltaje AC 120V/60Hz
Potencia 800W
Capacidad 5L

ANTES DE USAR POR PRIMERA VEZ

- Limpie todas las partes antes de usar por primera vez la unidad.
- Debe utilizar alimentos adecuados de acuerdo con las características de esta unidad.
- Coloque la unidad en posición boca arriba.
- Coloque el tazón de mezcla en la parte inferior y ajústelo.
- Coloque el accesorio correcto con tapa en el cierre y asegúrelo.
- Gire suavemente el botón de abertura. La cabeza de la unidad se hundirá. Presiónela para asegurarse que quede bien ajustada.
- Coloque el interruptor en la posición “p” y permita que la unidad trabaje por corto tiempo. Coloque el interruptor en una posición entre 1 y 6 y permite que la unidad trabaje por largo tiempo.
- Al terminar coloque el interruptor en la posición 0.
- Retire el tazón de mezcla de la base.

DESCRIPCIÓN

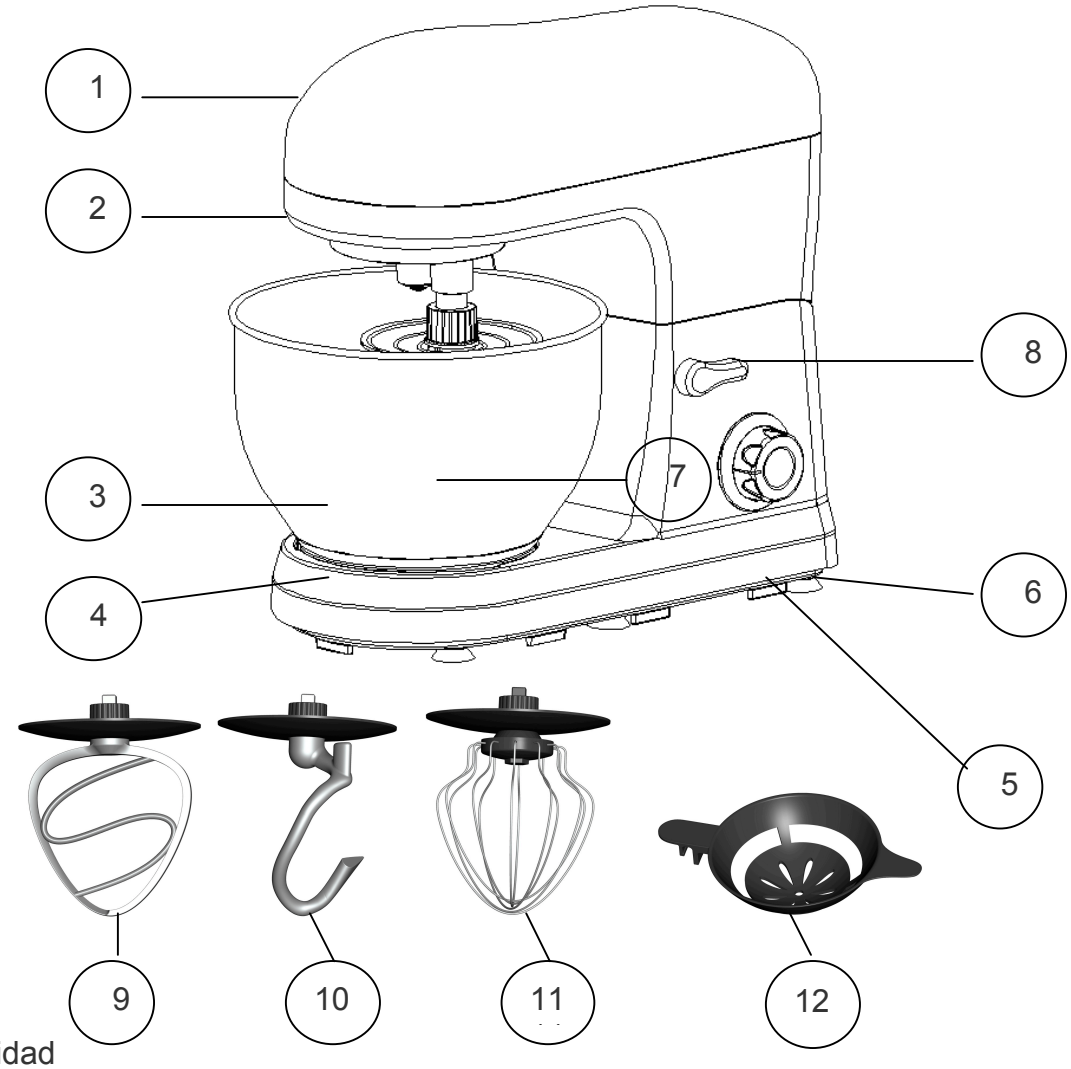

1. Tapa superior
2. Cabeza de la unidad
3. Tazón de mezcla
4. Cuerpo inferior
5. Tapa inferior
6. Patas
7. Botón regulador de velocidad
8. Botón de abertura
9. Cuchillo de agitación
10. Cuchillo de amasar
11. Batidores de huevos
12. Separadores de clara de huevo

INSTRUCCIONES

1. Coloque la comida que va a mezclar que corresponda al batidor quede utilizar para el tipo de comida.
2. Coloque al recipiente con la comida en la base y asegúrela.
3. Ajusta el batidor que desea utilizar.

4. Encienda la unidad y presione la cabeza de la unidad hacia abajo.

INSTRUCCIONES DE MEZCLA

HACER MASA O AMASAR

1. La proporción entre harina y agua es 5:3. (Esta proporción es sólo para referencia; usted puede variarla según sus gustos personales)
2. Utilice la velocidad 1 para mezclar entre 20 y 30 segundos. Utilice la velocidad 2 para mezclar entre 20 y 30 segundos. Luego utilice la velocidad 3 para mezclar entre 3 y 4 minutos.
3. Asegúrese de no ir más allá de la capacidad del recipiente.
4. La capacidad máxima del recipiente es, para harina, 1500 g, por un tiempo máximo de mezcla de 5 minutos, el cual se sugiere hacerlo en la velocidad 3.
5. Utilice el cuchillo de amasar.

BATIR HUEVOS O MEZCLAR MANTEQUILLA

1. Coloque los huevos en el recipiente. Se recomienda utilizar una velocidad de 4 a 6 para mezclar por 2 a 5 minutos hasta que los huevos se pongan pastosos.
2. La cantidad máxima de huevos es de 24.
3. Si necesita mezclar mantequilla utilice entre 2.5 y 3.5 L de mantequilla fresca en una velocidad entre 2 y 4 por un tiempo de 2 a 5 minutos.
4. Si necesita mezclar leche fresca, mantequilla u otros líquidos asegúrese de no exceder la capacidad del recipiente.
5. Utilice el batidor de huevos.

MEZCLAR PLATOS FRÍOS, ENSALADAS, COMIDAS LÍQUIDAS, CÓCTELES U OTROS LÍQUIDOS

1. Coloque los alimentos en el recipiente. Mezcla alrededor de 5 minutos entre las velocidades 1 y 6.
2. Recuerde no exceder la capacidad del recipiente. Entre más comida utilice, maneje una velocidad inferior para evitar que se riegue.
3. Cuando utilice la potencia máxima de la unidad utilice un tiempo máximo de trabajo de 5 minutos.
4. Utilice el cuchillo la agitación.

LIMPIEZA

- Recuerde apagar y desconectar la unidad antes de iniciar la limpieza y permita que se enfríe.
- Utilice una prenda suave para limpiar la unidad y evite que el agua entre al interior.
- No utilice productos o materiales abrasivos ya que pueden dañar el acabado.
- No sumerja la unidad en agua para limpiarla.
- Los accesorios pueden ser lavados con agua caliente.

CONTENIDO

- 1 Tazón de mezcla
- 1 Cuchillo de agitación
- 1 Cuchillo de amasar
- 1 Batidor de huevos
- 1 Separador de clara de huevo

DIAGRAMA DE CIRCUITOS

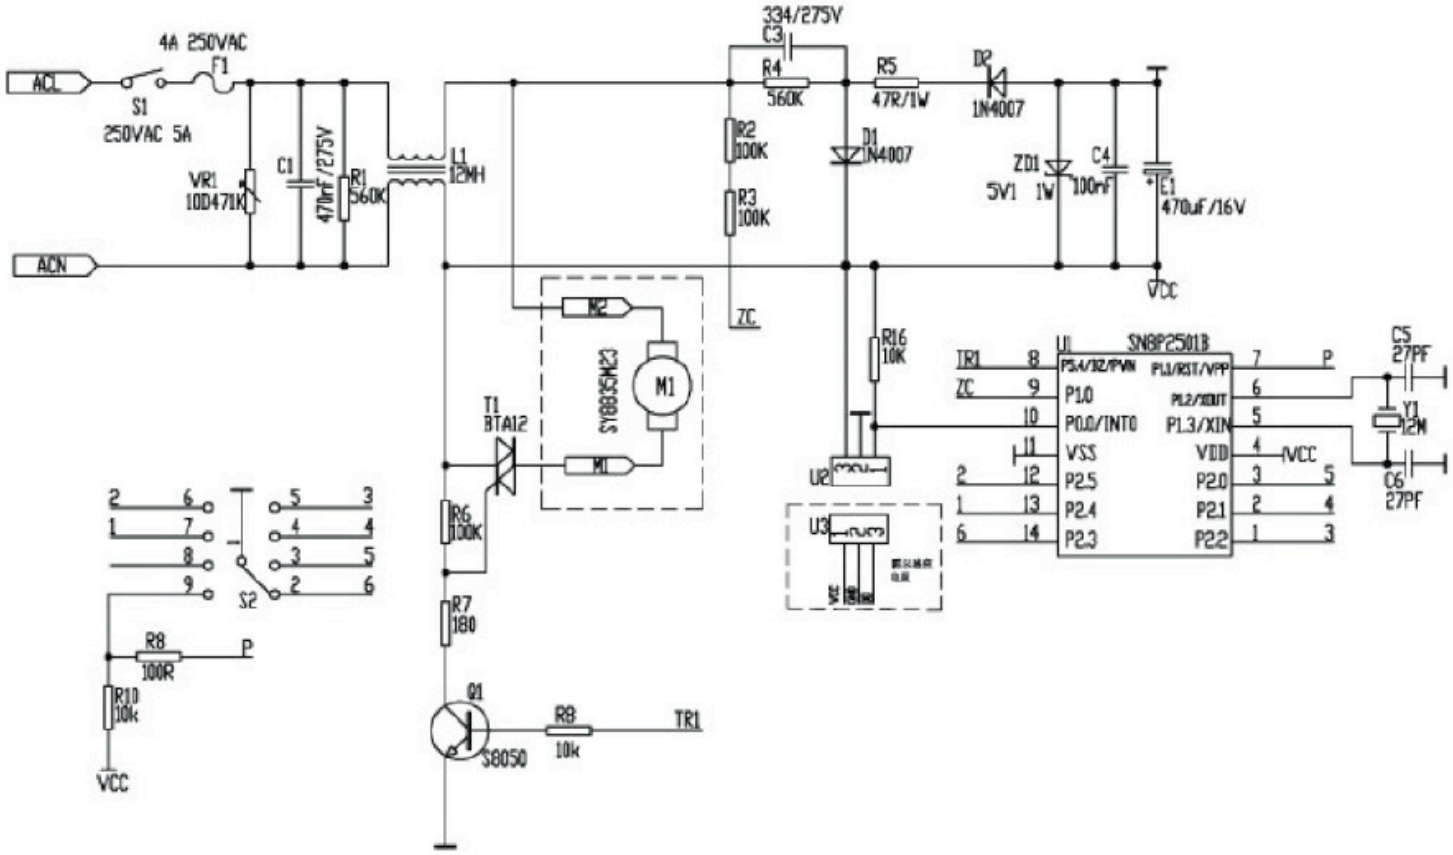

PREMIER®

INSTRUCTION MANUAL
HAND MIXER W/BOWL
ED-4482

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.
If you need extra support, please write to ***info@premiermundo.com***

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN

Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.

This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.

This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE
This unit may be submitted to changes in specifications, characteristics and/or operation without prior notice to the user, in order to continue improving and developing its technology.

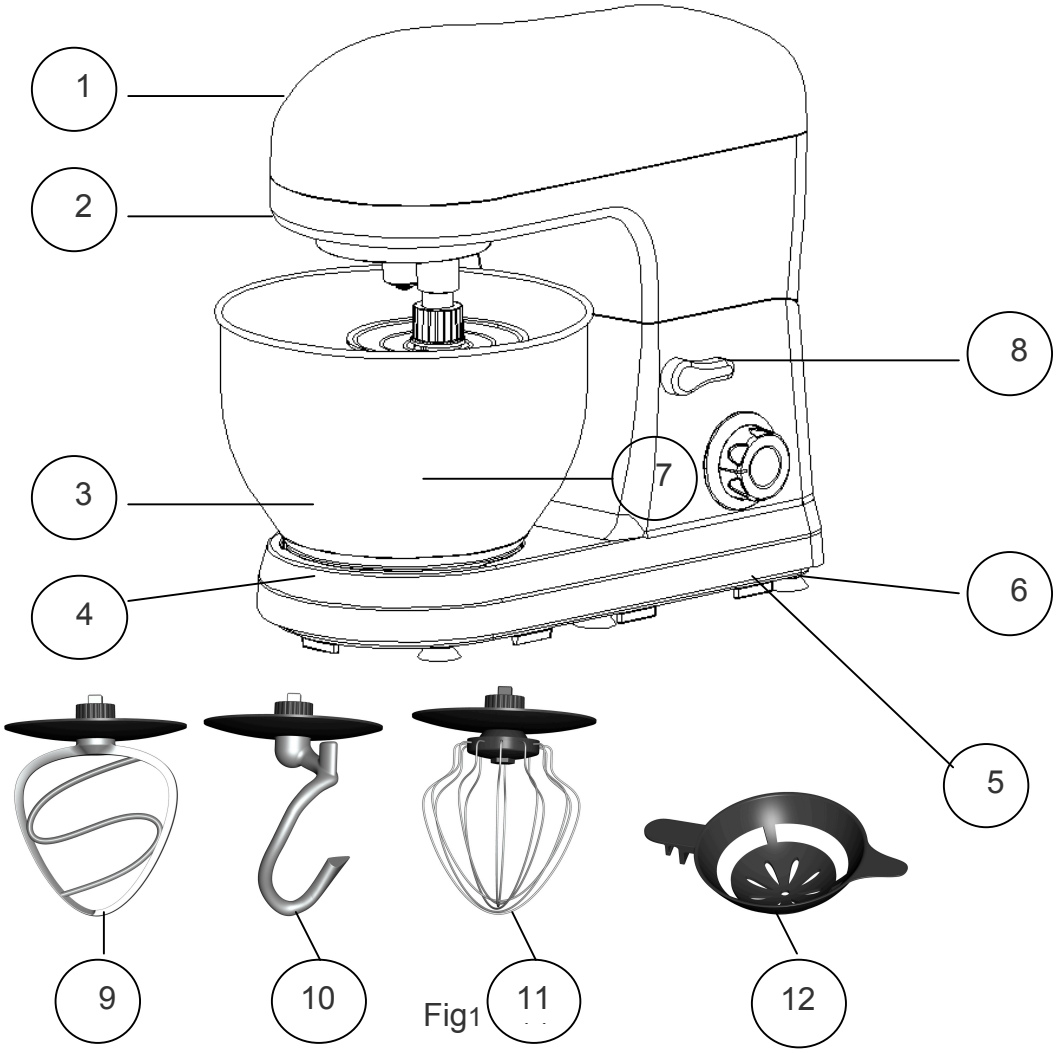

Fig1

Structural drawing

(1) upper lid
(2) Unit Head
(3) Mixing bowl
(4) lower body
(5) bottom cover
(6) foot pad
(7) speed-regulating knob
(8) opening knob
(9) stirring knife
(10) kneading dough knife
(11) egg-breaking whisk
(12) egg white separator

Safety

- For avoiding the electric shock, please don't put it near the water source and put the host machine into water or other liquid.
- Please read the related to instructional information and satety operation manual.
- Please don't tie the power cable together; for avoiding stumbling by the cables, please don't hang it on the edge of desk and cabinet
- Keep the voltage within the standard specification, it shows at the bottom of the host machine. The product only can word with AC electricity. Before power-on, please turn the speed regulation button □ for "0", it will be closed.
- Don't use it outdoor, it only fits for using indoors.
- Please don't put it near fire, tinder, (curtain, fabrics and so on)electromagnetic oven, toaster r thermo plasma
- Please put it on the smooth surface when use it.
- Please put it near power, it will cut the electricity conveniently.
- It will work under voltage rating, if not sure the electricity-supply situation, please consult electrical supply company.
- Please don't try to maintain it by yourself, if you open or move the lid, it will have electric shock danger.
- Please maintain it in the formal shop.
- Keep it away from children, put it in the place out of children's reach.
- Especially, keep children away from it when use it.
- Please use only within the functions limited.
- Please don't go on using it without anybody's supervision.
- Please don't touch the turning parts when use it.
- In it, it must include the product operation manual when it is sold to customer.
- The supply will not afford the loss and responsibility the customer unduly use it
- Please pull up the plug, if stop using or cleaning it.
- If the power cable is damaged, please go to the manufacturer to maintain.

Technical infomation

Voltage Frequency: AC120V/60Hz (800W)
Capacity□ 5 L

Before use for the first time

- All the parts will be cleaned thoroughly before the multifunction shortener is usd for the first time□Please do it as the indirection□
- Take the power cable from the bottom of product,.then connect to the AC socket.
- *Commissioning*

1. The mixing food must conform to the mixing food specified, and then press the Opening Knob, let the unit head up.
2. Put the mixing bowl into lower body, then turn and lock it.
3. Put the correct accessory with cover into the Lock, then locked it.
4. Slightly turn the opening knob down, the uint head will sink, then press the unit head, make sure the unit head to lock .
5. **Turn on the switch to "p" position, let the unit work short time, or turn on the switch to 1—6 position , let the unit work little long time.**
6. After working , turn the swich knob to "0" position.

7. Take the mixing bowl out of base.

Instructions

1. First, please mix the food which is fit for the multifunctional shortener specified by the manufacturer,then turn on the knob to open the upper lid by the clockwise.
2. Put the stirring bowl with food into base and push the upper arrowhead to make the bowl lock anticlockwise.
3. Then make the egg-breaking whisk by the clockwise to lock on the knife connector.
4. Last, turn on the knob lockwise and push the upper lid to chuch the machine.

Operation Instruction

Dough making or kneading dough

1. The proportion flour and water is 5:3 (the proportion is only for your referance, it may adjust accoring to your personal requirements).
2. Use speed 1 to mix for 20-30 seconds, use speed 2 to mix 20-30 seconds, then use speed 3 to mix for 3-4 minutes.
3. Ensure not beyond the Max capacity of the mixing bowl.
4. The mixing bowl Max capacity is: flour 1500g, mixing longest time for 5minutes, suggest to working at speed 3.
5. Use the mixing equipment: kneading dough knife.

Breaking egg or mixing butter

Pouring the egg into bowl as quatity specified, recommend to use speed 4-6 to mix for 2-5 minutes, until the eggs become pasty.

1. The Max quatity of egg-breaking is 24pcs.
2. While mixing the butter, mixing 2.5-3.5L fresh butter at speed 2-4 to mix 3-5 minutes.
3. When mixing the fresh milk, butter or other liquid, please ensure its quatity within the Max capacity of mixing bowl.
4. Use the mixing equipment: egg-breaking whisk.

Mixing cold dish, salad, and liquid food, cocktail or other liquid. :

1. The mixing food will be backed into the mixing bowl as personal preference. Usually it will mix about 5 minutes between speed 1 and speed 6.
2. Please don't be beyond the capacity of mixing bowl; with more food, please mixing at low speed, or the food will overflow.
3. Use the mixing equipment specified: mixing knife.
4. When the machine uses the Max 800W, for kneading dough per time keeping on working for 5 minutes long.

Cleaning

1. Before cleaning,please ensure the speed button for speed "0" and keep close; and pull up the power plug.
2. After using, waiting for the machine cooldown, then begin to clean.
3. When cleaning the outer device, you may use dry or wet cleaning cloth and a little cleaner to clean, but can't allow the water or cleaner into inner device, in case damage the parts or cause the danger of electric shock.
4. Please don't use abrasive material or alcohol to clean the inner device and dustproof lid.
5. Please don't dip the machine into water to clean.

6. Please carefully cleaning the mixing equipments, you may use warm water and cleaner to clean it.
7. Please carefully cleaning the mixing bowl, it may also use the usual cleaner to wash, but please don't use abrasive material or special cleaning liquid.
8. You may use dish-washing machine to clean the bowl, stirring knife, kneading dough knife, egg-breaking whisk and dustproof lid.

Packing List

- Mixing bowl 1 pc
- stirring knife 1 pc
- knead dough knife 1 pc
- egg-breaking whisk 1pc
- egg white separator 1pc

Circuit diagram